
IQ FOB QUICK INSTALL GUIDE



Convenience on a keychain

The IQ Fob is one of the easiest ways to use your system. Most people find themselves remembering they haven't armed their system as they get into the car, or are too busy carrying things to arm their system from the IQ Panel.

The IQ Fob allows you to activate your system within 100' of the IQ Panel, and has the hidden feature of being able to activate an intrusion or "police" panic by pressing "Lock" and "Unlock" together for 3 seconds.

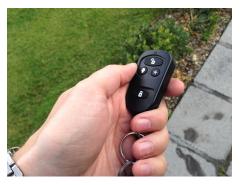

FEATURES

- •Lock button can arm in stay or away mode
- •Unlock disarms system
- •Up to 100' range
- Panic function



This is a quick guide for experienced installers only. Refer to http://dealers.qolsys.com (login required)

STEP 1 LEARN INTO PANEL						
Place your panel in "autolearn" mode		d arm and disarm	ADI Customize nan as desired and a	ne and settings	ASK JENN Q	olsys
ARMING YOUR SYSTEM		STEP 3 DISARMING YOUR SYSTEM		STEP SENDING A PANIC SIGNAL		
	Press the arm button down once until the red LED lights up for stay mode. Press a second time to arm away.		Press the disarm button down once until the red LED lights up to disarm the system.		Press and h the arm an disarm but down for th seconds to an emerge panic signa the panel.	id itons hree send incy
Document#: IQDW-QG-03-17 Revision#: 3/8/17 Issue Date: MAR 2017 Qolsys Product #: QS-1310-P01		Qolsys Inc. proprietary. Reproduction without permission is not permitted. FCC ID: U5X-RF245-2 IC: 8310A-RE100			OT QUESTION ONTACT TECH SUPP TechSupport@Qolsys.c	ORT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.