
IMAGE SENSOR QUICK INSTALL GUIDE



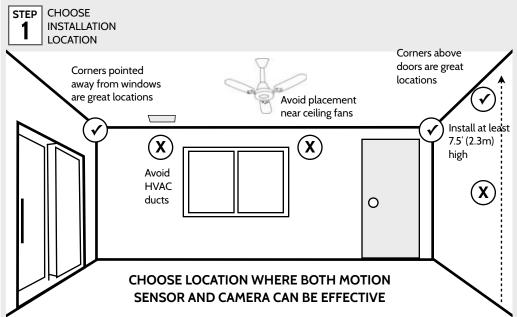

STEP OPEN DEVICE CASING



Slide back cover of the casing downward and remove from device

STEP CHC MOU ANG

CHOOSE MOUNTING ANGLE



ATTACH BACK MOUNT



REPLACE BACK COVER



CHOOSE POST MOUNT



Choose mounting type based on height and distance. 8ft (2.4M) or 6ft (1.8M)



Align mount on back and secure with provided hardware



Align back cover and slide upward to secure on device







STEP MOI

SLIDE DEVICE ONTO POST AT DESIRED ANGLE





LEARN INTO PANEL



SEND TEST IMAGE



Place your panel in "autolearn" mode



Insert batteries to place device in "learn" mode



ADD

Customize name and settings as desired and and touch "ADD"



SUPPORT

GOT QUESTIONS?

CONTACT TECH SUPPORT

TechSupport@Qolsys.com

Oolsys Inc. proprietary. Reproduction without permission is not permitted. This document references the Image Sensor manufactured by Alarm.com Document last revised 03/22/17 FCC ID: YL6-143IS221 IC: 9111A-143IS221

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.