




The IQ Hardwire 8 offers a cost effective way of integrating hardwired security zones with the IQ Panel. It includes backup battery charging and features end-of-line resistor learning, making rewiring different resistor values a thing of the past.

Note: Not for use with life safety devices, such as Smoke or CO detectors

IN THE BOX

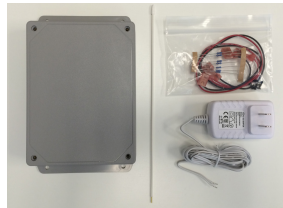

- IQ Hardwire 8
- Cover
- Antenna
- Power Supply
- 4 Screws
- 8 Resistors (3K)
- Battery cables

TECHNICAL SPECIFICATIONS

Input Voltage: 16.0VDC Plug-In Transformer
Backup Battery: 12VDC 5AH Max (optional)
Dimensions: 5.5" X 3.5"
Operating Temperature: 32 to 122F (0 to 50C)
Humidity: 95% RH Max
EOL Supervision: 1K to 10K Ohm
Input Zones: 8 (must have resistor)
Zone Type: N/O or N/C compatible


INFORMATION

Document #: IQHW8QG
 Revision Date: 8/10/17
 Qolsys Part #: QS7120-840

Confidential & Proprietary.
 Made in Taiwan.
 Full installation manual and other documentation available at Qolsys.com.

STEP 1: INSTALL THE HARDWARE

1. Mount the IQ Hardwire 8 vertically in your desired location.
2. Install provided antenna into the "ANT" terminal at the top of the unit free from obstructions
3. Wire all hardwired sensors/leads into the terminals marked "Zone 1-8"
 - a. All sensors must have a resistor installed between 1k-10k Ohm in either the N/O or N/C position
4. Plug in a 5Ah Max backup battery with included battery leads (battery not included).
5. With provided transformer, connect power supply leads into the terminals marked +16.0V GND then plug in the IQ Hardwire 8's power supply. (IMPORTANT: dashed wire is positive)

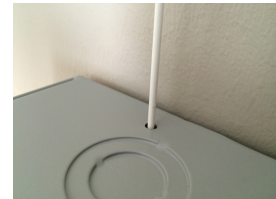

If mounting inside a metal can, the antenna must extend outside the enclosure to ensure RF communication

STEP 2: PAIRING INDIVIDUAL ZONES/SENSORS



Settings



Enter installer code
 (Default is 1111)




Installation



Security Sensors




Auto Learn Sensor

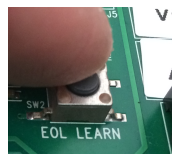


Press and hold "EOL Learn" for 1-2 secs. (all Zone LED's flash and then turn off)




EOL Cal LED will turn ON. This puts the module into "Enroll Mode".

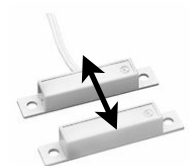

 Trip (Open/Close) each hardwired zone one at a time




The IQ Panel will "chime" indicating it has found a new sensor. Touch "Okay" to proceed.

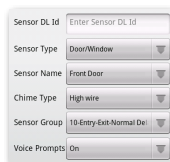

Customize sensor type and settings as desired. Repeat for each zone.



When a sensor has been tripped, the resistor value is calibrated and the Zone LED will illuminate and stay on until you exit enroll mode.

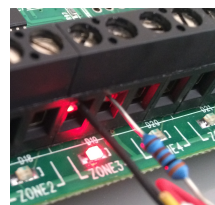

Once all desired zones have been learned, press the "EOL Learn" button to exit "Enroll Mode". The EOL Cal LED will turn OFF indicating you are no longer in "Enroll Mode" and all zone LED's will turn OFF.



TROUBLESHOOTING

EOL LEARN Button: To enter and exit "Enroll Mode" and calibrate resistor values

MEMORY RESET Button: Clears memory and resets the device to factory defaults

PROCESSOR LED: Flashes during normal operation

RF XMIT LED: Flashes when RF transmission is being sent

EOL CAL LED: Flashes when EOL resistors are not calibrated or when no zones have been learned in. ON when device is in "Enroll Mode". OFF when device is in "Normal Operation Mode"

ZONE LED: Flashes several times when EOL Cal button is pressed. OFF while in "Enroll Mode" unless a zone has been learned in or tripped, then ON. OFF while in "Normal Operation Mode" unless a zone is open, then ON.

How to Clear the Memory: Power down the unit by unplugging the battery leads and the power supply. Hold down "Memory Reset" for 3 seconds while re-applying power to the device. Processor, RF Xmit and EOL Cal LED's will begin to flash indicating that the module has been reset.



NEED MORE HELP?

CONTACT TECH SUPPORT

(855) 4-QOLSYS

TechSupport@Qolsys.com

WIRING DIAGRAM

